
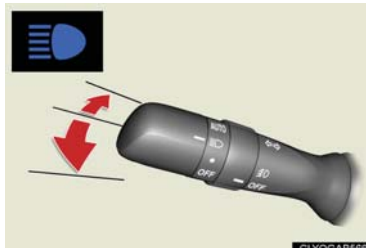


## Headlights

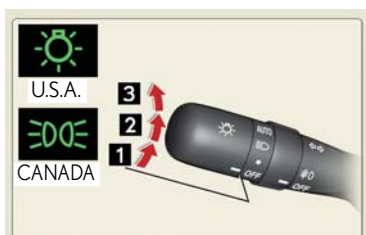

- 1 The instrument panel, side marker, parking, tail and license plate lights turn on.
- 2 The headlights and all lights listed above turn on.
- 3 The headlights and parking lights turn on/off automatically in accordance with ambient light levels.

To engage the high beams, push the lever forward. To flash the high beams temporarily, pull the lever toward you.

### n AFS (Adaptive Front-lighting System)

AFS improves visibility on curves by automatically adjusting the horizontal orientation of the headlights in accordance with vehicle speed and the degree of the tire angle as controlled by steering input.

The system can be turned on and off using the satellite switch. (→P.24)

## Headlight Cleaner (If Equipped)



The headlight cleaner can be used only when the "ENGINE START STOP" switch is in IGNITION ON mode and the headlights are on.

## Fog Lights




The fog lights can be used only when the headlights (low beam) are on.

## Windshield Wipers and Washer



- 1 Automatic operation
- 2 Low speed
- 3 High speed
- 4 Single wipe
- 5 Wash and wipe

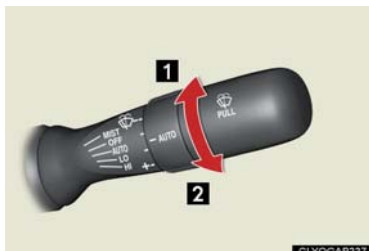

When the wipers are set to automatic operation, sensor sensitivity can be adjusted by turning the band.

- 1 Decreases the sensitivity (-)
- 2 Increases the sensitivity (+)

## Rear Window and Outside Rear View Mirror Defoggers

### ► Without navigation system



To defog the rear window and the outside rear view mirrors, press the button.


Press again to cancel.

### ► With navigation system



The system turns off automatically after 15 minutes.

## Instrument Panel Light Control

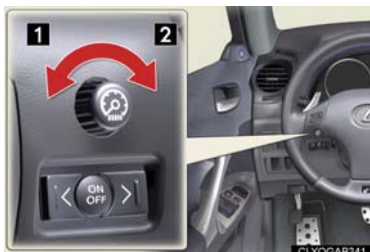

**1** To dim: turn the dial counterclockwise.

**2** To brighten: turn the dial clockwise.